SPT®

INSTRUCTION MANUAL
ELECTRIC OVEN

Model Number: SO-1005(HA-160A)

INTERTEK ETL CM LISTED C US
3053677

Before operating your Oven Toaster, Please read all instructions carefully and keep it for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using appliance.
- Close supervision is necessary when this appliance is used near children. This appliance is not for use by children.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or alter the appliance. Do not operate if appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or mechanical adjustment.
- Before using this appliance, move it four to six inches away from the wall or any object on the countertop. Do not store any item on top of the appliance when in operation. Do not use on surfaces where heat may cause a problem.
- A fire may occur if this appliance touches or is covered by flammable material, including curtains, draperies, etc., when in operation.
- Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
- Do not place any flammable material such as paper, cardboard, plastic, etc. in the oven.
- When broiling, the bake/broil tray assembly and rack must be used.
- To reduce the risk of fire or electrical shock, oversized foods or utensils must not be inserted into the toaster-oven-broiler.
- To reduce the risk of electrical shock, do not place any part of the unit in or under water or other liquid. See instructions for cleaning. Do not use outdoors, or while standing in damp area.
- To reduce the risk of electrical shock, do not clean with metal scouring pads. Damage could occur to parts.
- Unplug from outlet when not in use and before cleaning. Always turn unit 'OFF' before unplugging. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- CAUTION: Never leave toaster-oven-broiler unattended when broiling or toasting. Temperature control knob should be in "OFF" position when unattended.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not touch hot surfaces. Use handles or knobs.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Use extreme caution when removing broiling tray or disposing of hot grease.
- Do not place on or near a hot gas or electric burner or in a heated oven. Use accessory attachments only if recommended by the manufacturer.
- Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

THIS PRODUCT FOR HOUSEHOLD USE ONLY.

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised ir their use. If an extension cord is required, special care and caution is necessary. Also, the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A., 162 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

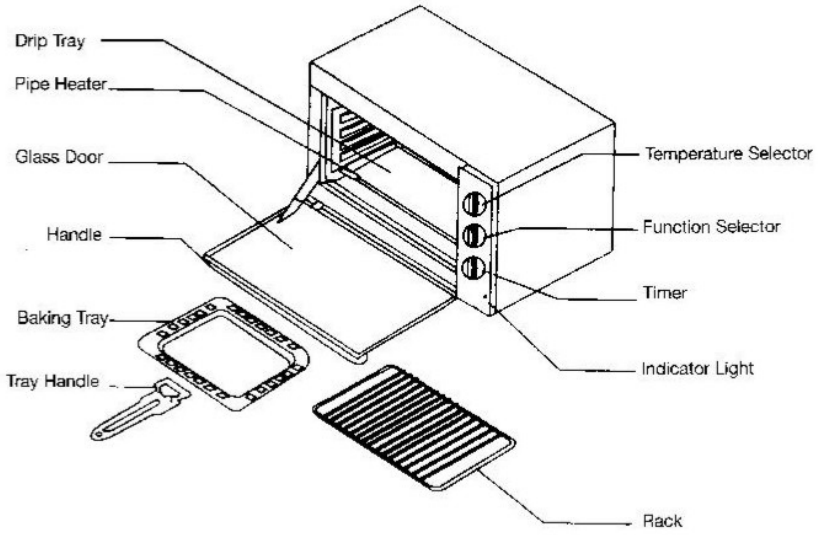

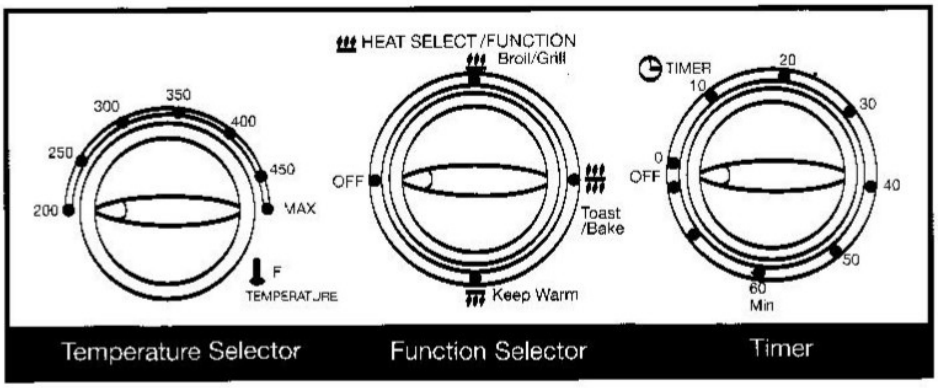

HOW TO USE

Read all sections of this booklet and follow all instructions carefully.

1. Insert the plug into the wall socket.
   - Don't plug in the same outlet with other electric appliances.
   - It is dangerous to plug into wall outlet when hands are wet.
2. Turn the oven on for about 3-5 minutes and make sure there is nothing in it. The oven might give off a slight odor the first time. This is perfectly normal and harmless and will disappear after use.
3. Place your food inside the oven on the rack or baking tray. Put oily food (fish, chicken, meat) on the rack for roasting and insert the baking tray at the lower shelf, or put directly into the baking tray. Put non-oily food (toast, cake, cookie...) directly into the baking tray at the middle shelf.
4. Use the timer to set cooking time and indicator light will switch on. For cooking time less than 25 minutes, set the timer to 30 minutes and turn it back to the required cooking time.
5. Select the temperature using the thermostat knob.
6. Set the function selector to the desired position.
   See diagram below for explanation of functions:

	BROIL/GRILL FUNCTION	Heating on upper heating element only
	KEEP WARM	Heating on lower heating element only
	TOAST/BAKE	Heating on upper and lower heating element

OFF: Stop heating. The indicator light will switch on if timer is not on "OFF".

6. After desired cooking time has lapsed, the timer will sound and the power will cut off automatically & indicator light switches off.
7. Remove your food using the clipper or gloves. Unplug from outlet when not in use.
8. Convection air
   - Select the heat selector to the position of "Broil/Grill" or "Toast/Bake" for even convection air cooking.
   - Do not open door to enable the convection air to circulate during operation.

9 Barbecue grill
   - Ensure that the rack is placed correctly, and put the drip tray at the base of oven.
   - Select the heat selector to the position of "Broil/Grill or "Toast/Bake" and turn on timer switch for barbecue grill cooking.
   - It is dangerous to touch rack when operating. Switch off the oven and allow it to cool completely before cleaning.

WARNING: TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE.

Caution: Always use extreme care when removing broiler rack, fry pan, baking racks, crumb tray or any hot container from a hot oven. Always use the tray/rack handle, or an oven mitt when removing these items.

BROIL/GRILL FUNCTION: Upper Elements Only

- Set temperature selector to 450°
- Turn Function Selector to Broil/Grill
- Preheat the oven
- Place the baking tray to the lowest level
- Place the food on the Rack and slide into the top rack support guide or middle rack support guide, depending on the thickness of the food that you are cooking. Food should be placed as close as possible to the top heating element without touching it
- Set temperature control to the appropriate temperature
- Brush food with sauces or oil as desired
- Turn Timer to appropriate position
- It is advisable to leave the door slightly ajar
- When broiling is complete, turn the Timer to the "Off" position

NOTE: All broiling times are based on meats at refrigerator temperature. Frozen meats may take considerably longer. Therefore, use of a meat thermometer is highly recommended.

KEEP WARM FUNCTION: Lower Elements Only

- Set temperature selector to approximately 350°
- Turn Function Selector to Keep Warm
- Turn the timer to the approximate position
- Turn the timer to the "Off" position when finished

Caution:
When sliding rack out of oven, always support the rack. Do not let go until you are sure the rack is securely supported by the rack handle.

TOAST/BAKE FUNCTION: Upper and Lower Elements

Large capacity oven allows for toasting 4 to 6 slices of bread, 6 muffins, frozen waffles or frozen pancakes. When toasting only 1 or 2 items, place food on the rack in the center of the oven.

- Set temperature selector to 450°
- Turn Function Selector to Toast/Bake
- Place food to be toasted on the rack
- Ensure Drip Tray is in place
- Turn the Timer to set time for the desired darkness.
- Bell will ring to signal the end of the Toast/Bake cycle

BAKE

Bake your favorite cookies, cakes, pies, brownies, etc. The bakeware that will fit in your oven are up to 9 inches in length. We do not recommend the use of oven roasting bags or glass containers in the oven. Never use plastic, cardboard, paper or anything similar in the oven.

Note:
When using a single Rack, position the Rack in the lowest support guide.

OPERATION

Place the Bake Rack in the lowest or middle Rack Support Guide depending on the height of the pan or according to the recipe.

- Preheat the oven as directed in the recipe, approximately 15 minutes.
- Place pan with item(s) to be baked on the Rack
- Turn the Function Control to Toast/Bake
- Turn the Time Control to appropriate position
- When baking is complete, turn the Timer to 'OFF'

Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product if modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
  Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

Sunpentown Int'l Inc.
21415 Baker Parkway, City of Industry, CA 91789-5236
Tel: 909-468-5288 · Fax: 909-468-5279
service@sunpentown.com
www.sunpentown.com